



# SolderMask in 5 Steps

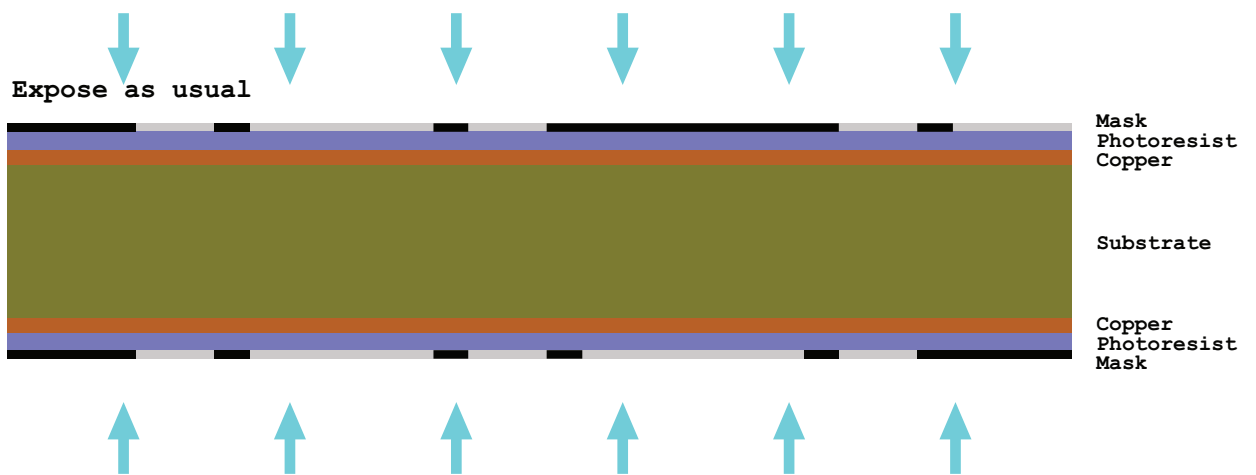

After Development



TIP: Second Exposure with Negative of Contacts after Etching

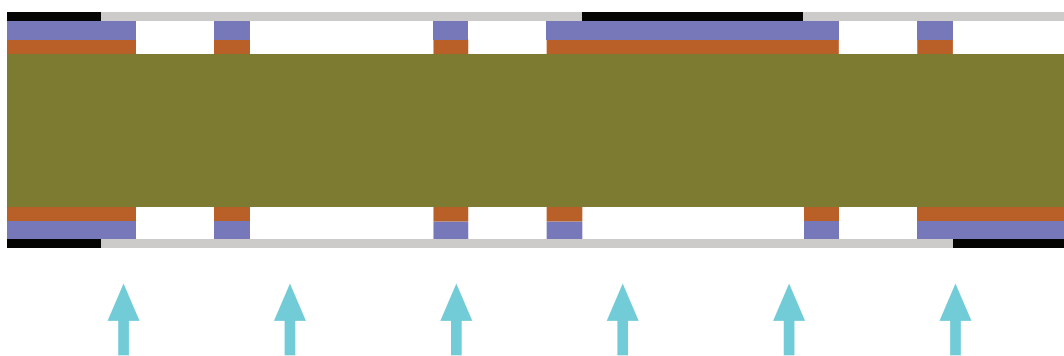

After 2nd Development & Drilling: Rest of Photoresist as SolderMask

